



Dear Customer,

Before using the appliance, please read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.

Connection to the mains supply

Make sure that the supply voltage corresponds with the voltage marked on the rating label. This product complies with all binding CE labelling directives.

Familiarisation

1. Bean container lid
2. Bean container
3. On/Off switch
4. Quantity selector
5. Power cord
6. Rating label (on underside)
7. Grinding assembly
8. Collection container with lid
9. Adjustment for coarse/fine grind
10. Housing

(not pictured: Cleaning brush)

Important safety instructions

- Before the appliance is used, the main body including the power cord as well as any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance.
- Do not allow the appliance to touch hot surfaces (e.g. oven-plates) or to come into contact with any open heat sources.
- **Always remove the plug from the wall socket**
 - before assembling the appliance,
 - after use,

- in case of any malfunction, and also
- before opening the bean or collection container, and also before removing either from the housing,
- before cleaning the appliance.
- Do not let the power cord hang free.
- When removing the plug from the wall socket, never pull on the power cord. Do not let the power cord hang free.
- No responsibility is accepted if damage results from improper use, or if these instructions are not complied with. Any misuse can cause severe personal injury.
- Do not leave the appliance unattended while connected. Always remove the plug from the wall socket, even if you leave the room only for a short while
- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved.
- Children must not be permitted to operate the appliance. The appliance and its power cord must be kept well away from children.
- Children must not be permitted to play with the appliance.
- **Caution:** Keep any packaging materials well away from children: there is a risk of suffocation.
- This appliance is intended for domestic or similar applications, such as in
 - shops, offices and other similar working environments,
 - agricultural areas,
 - hotels, motels etc. and similar establishments,
 - bed-and breakfast type environments.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments.

The address can be found in the appendix to this manual.

Short-time operation

The appliance has been designed for short-term operation only, i.e. it should not be operated continuously for more than 2 minutes. Switch off the appliance afterwards and allow the motor to cool down (10 Min.) before switching it on again.

Thermal safety cut-out

The appliance has an integral safety cut-out which protects it from overheating. Should the cut-out have been activated, allow the appliance to cool down to room temperature before switching on again

Before using for the first time

Before initial use, the grinding mechanism, bean and collection containers should be cleaned as described in the section *General care and cleaning*.

Operation

Adjusting the grind level

- The adjustment control allows for adjustment of the coarse/fine setting in several steps. Depending on the type of coffee and the preparation method used, the following information on grinding levels may be helpful

Adjustable grind settings:

- 1-6 for automatic coffee makers
- 7-9 for brewing when no machine is used

This appliance is not suitable for grinding espresso beans.

- **Caution:** To prevent beans from getting caught in the grind mechanism and causing possible jamming of the motor, always set the grind level first before putting the beans into the container. If the beans have already been put in, the grind level should only be changed while the motor is running.
- Turn the coarse/fine adjustment wheel to

the desired setting.

Loading the coffee beans

- Remove the lid of the bean container.
- Load the beans inside and replace the lid.
- The maximum capacity of the bean container is 150 g.

Selecting the right quantity

- Use the quantity selector to set the amount of ground coffee desired. Any amount from 1 to 10 cups can be processed in a single cycle. However, the quantity-per-cup information on the selecting knob is approximate only. Since different types of coffee as well as miscellaneous factors such as the size of the cups and your personal preference may require a different setting, we recommend that you try out whatever suits your own personal taste.
- **Note:** If the quantity selector is set to position '0', no function will be selected.
- The maximum capacity of the collection container is 100 g. **Caution:** Always make sure you empty the collection container in good time, as an over-full container may cause a blockage inside the appliance.

Grinding the beans

- Make sure that the collection container lid is properly fitted before attaching the container itself to the main unit.
- Insert the plug into a suitable wall socket.
- Press the start button.
- The grinding process begins and stops automatically once the selected amount of ground coffee has been produced.
- The process can be stopped at any time by pressing the start button again.
- Once grinding has finished, remove the plug from the wall socket and wait until the motor has come to a complete standstill before removing and opening the collection container.
- **Note:** To ensure optimum coffee flavour, only the required quantity of beans should be ground immediately before brewing. Any excess ground coffee should be stored in a suitable air-tight container.

General care and cleaning

- Before cleaning the appliance, always remove the plug from the wall socket and wait until the motor has come to a complete standstill.
- To avoid the risk of electric shock, do not clean the housing or the power cord with water, and do not immerse them in water. The housing may be wiped with a slightly damp, lint-free cloth. Wipe thoroughly dry afterwards.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
- Take off the **collection container** and its lid, and clean them with a mild detergent. Ensure they are thoroughly dry before being replaced on the grinder.
- Before the **bean container** is cleaned, any remaining beans should be removed first. Wipe the container with a damp cloth; dry thoroughly afterwards. The lid should be well rinsed and then properly dried.
- The **grinding mechanism** can be opened up for cleaning, and also in case of any malfunction.
 - Take off the bean container lid.
 - Remove any remaining coffee beans.
 - Turn the coarse/fine adjustment wheel to position '1'.
 - Unlock the top part of the grinding assembly by turning clockwise and lift it off.
 - Use the brush provided to clean the grinding mechanism and the top part of the grinding assembly.
 - **Caution:** The grinding assembly has sharp edges; care should therefore be taken to avoid injury.
 - Replace the top part of the grinding assembly and lock it by turning anti-clockwise until the coarse/fine adjustment wheel begins to move.

In case of problems

- **Ground coffee spills from the collection container:**

This is a normal occurrence. Static charge is usually the cause.

- **The motor does not start, or makes**

abnormal noises as if running under a heavy load, or the grinder makes a high-pitched, squealing sound:

The grind mechanism is choked or blocked. Remove the plug from the wall socket immediately and clean the mechanism as described in the section *General care and cleaning*.

- **The motor does not start:**

The quantity selector is set to '0'. Select the desired amount and try again.

Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. This guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.