


# SEVERIN

Gebrauchsanweisung	Citruspresse (D)
Instructions for use	Citrus fruit juicer (GB)
Mode d'emploi	Presse-agrumes (F)
Gebruiksaanwijzing	Citruspers (NL)
Instrucciones de uso	Exprimidor de cítricos (E)
Manuale d'uso	Spremiagrumi (I)
Brugsanvisning	Citrusfrugtpresse (DK)
Bruksanvisning	Citruspress (S)
Käyttöohje	Sitruspuserrin (FIN)
Instrukcja obsługi	Wyciskacz do cytryn (PL)
Οδηγίες χρήσεως	Στίφτης εσπεριδοειδών (GR)
Руководство по эксплуатации	Соковыжималка для цитрусовых (RUS)

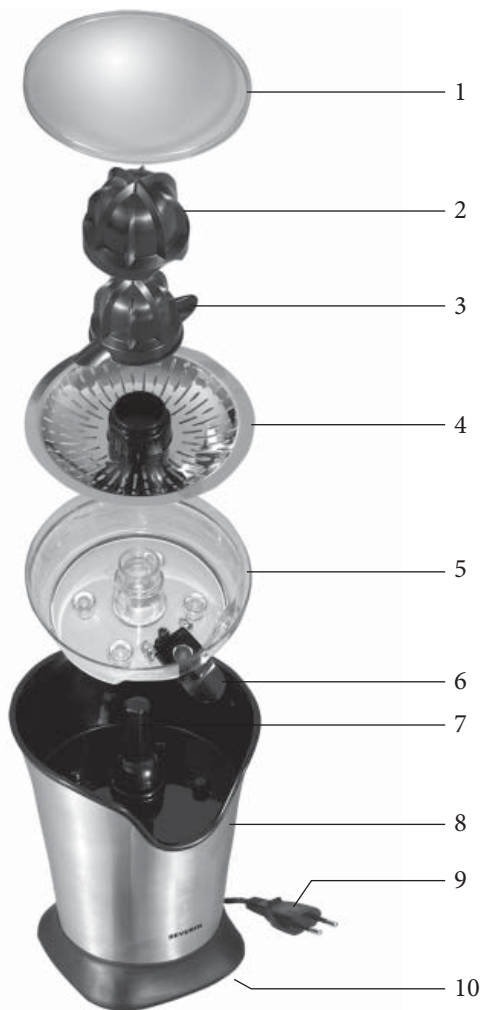

**Dear Customer,**

Before using the appliance, please read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.

**Connection to the mains supply**

Make sure that the supply voltage corresponds with the voltage marked on the rating label. This product complies with all binding CE labelling directives.

**Familiarisation**

1. Dust cover
2. Juicer dome, large
3. Juicer dome, small
4. Pulp sieve
5. Juice tray
6. Stainless-steel spout with drip-stop
7. Drive shaft
8. Base unit
9. Power cord
10. Juicer dome storage compartment (in the base)

**Important safety instructions**

- This appliance may be used by children (at least 8 years of age) provided they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved. Children must not be permitted to carry out any cleaning or maintenance work on the appliance unless they are supervised and at least 8 years of age. The appliance and its power cord must be kept well away from children under 8 at all times.
- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the

use of the appliance and fully understand all dangers and safety precautions involved.

- Children must not be permitted to play with the appliance.
- **Caution:** Keep any packaging materials well away from children – these are a potential source of danger, e.g. of suffocation.
- Before the appliance is used, the main body as well as any attachments fitted should be checked thoroughly for any defects. If the appliance, for instance, has been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on its operational safety.
- The power cord should be regularly examined for any signs of damage. In the event of such damage being found, the appliance must no longer be used.
- Do not allow the unit or its power cord to touch hot surfaces or come into contact with any heat sources.
- Do not leave the appliance unattended while connected. Always remove the plug from the wall socket, even if you leave the room only for a short while
- **Always remove the plug from the wall socket**
  - before assembling or disassembling the appliance,
  - in case of any malfunction,
  - after use,
  - before cleaning the appliance.
- When removing the plug from the wall socket, never pull on the power cord. Do not let the power cord hang free.
- Do not use the appliance with any attachments other than those provided by the manufacturer.
- **Caution:** Any misuse can cause severe personal injury.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic or similar applications, such as

- in shops, offices and other similar working environments,
- in agricultural areas,
- by customers in hotels, motels etc. and similar establishments,
- in bed-and-breakfast type environments.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The addresses can be found in the appendix to this manual.

### Start up

Before the juicer is used for the first time, it must be cleaned as described in the section *General Cleaning and Care*.

### Juicer dome storage compartment

Both domes, large and small, can be stored together or separately inside the base of the unit. To store, open the lid in the base, place the domes inside and close the lid again.

### Operation

- Take the juicer dome(s) from the base storage.
- Attach the juice tray to the drive shaft of the base unit.
- Fit the pulp sieve onto the juice tray with the curved side facing down.
- Fit the smaller dome over the pulp sieve and onto the drive shaft.
- When processing larger citrus fruits such as oranges, the larger juicer dome can be fitted over the smaller one; ensure that the recesses on the larger dome fit over the ridges on the smaller one.
- Place a glass or any other suitable container under the juice outlet. Push the spout down to open the outlet.
- Insert the plug into a suitable wall socket.
- Cut the citrus fruit in half and push one of the halves lightly down onto the dome with the cut section facing downwards.

- The drive shaft will start rotating automatically once pressure is applied to the dome. The appliance switches off when pressure on the dome is lifted.
- When processing larger quantities of fruit, the pulp sieve must be emptied from time to time as necessary.
- Once all the juice has been extracted, push the spout up to close the outlet and remove the plug from the wall socket.

### General Cleaning and Care

- Before cleaning the appliance, remove the plug from the wall socket.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- Do not use abrasives, harsh cleaning solutions or hard brushes for cleaning.
  - The base unit may be wiped with a slightly damp, lint-free cloth.
  - Detachable parts should be thoroughly cleaned immediately after use with hot water and a mild detergent. To ensure that any juice residue can be drained off, the spout should be pushed down during cleaning.
  - Refit the juice tray, pulp sieve and dust cover after cleaning.

### Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

### Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with

by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. This guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.