



FR 2430

DE	Gebrauchsanweisung	Heißluftfritteuse	4
GB	Instructions for use	Air fryer	11
FR	Mode d'emploi	Friteuse sans huile	18
NL	Gebruiksaanwijzing	Hetelucht friteuse	25
ES	Instrucciones de uso	Freidora por aire caliente	32
IT	Manuale d'uso	Friggitrice ad aria	39
DK	Brugsanvisning	Varmluft frituregryde	46
SE	Brugsanvisning	Varmluftsfritös	53
FI	Käyttöohje	Kuumailmakeitin	59
PL	Instrukcja obsługi	Frytkownica z termoobiegiem	66
GR	Οδηγίες χρήσεως	Φριτέζα αέρα	73
RU	Руководство по эксплуатации	Воздушная фритюрница	81



Air fryer

Dear Customer,

Before using the appliance, read the following instructions carefully and keep this manual for future reference. The appliance must only be used by persons familiar with these instructions.




Connection to the mains supply

The appliance should only be connected to an earthed socket installed in accordance with the regulations.

Make sure that the supply voltage corresponds with the voltage marked on the rating label.

This product complies with all binding CE labelling directives.



Familiarisation

1. Operating display
2. Symbols for automatic programmes
3. Temperature / Time display
4. Buttons \oplus/\ominus for changing/selecting temperature and time
5. On/Off button 
6. Programme selection menu button 
7. Manual temperature / Time programming button 
8. Housing
9. Basket insert with ceramic coating
10. Basket holder with ceramic coating
11. Release button
12. Handle

Important safety instructions

- In order to avoid hazards, repairs to this electrical appliance or its power cord must be carried out by our customer service. If repairs are needed, please send the appliance to our customer service department (see appendix).
- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the housing or power cord with water and do not immerse them.
- For detailed information on cleaning the appliance, please refer to the section *Cleaning and care*.
- The appliance is not intended to be operated by

means of an external timer or separate remote-control system.

- Place the appliance on a stable, heat-resistant work surface impervious to splashes and stains, with sufficient space around it.
- **Caution:** Once the basket holder has been removed, do not touch the interior of the fryer. The surface where the holder is inserted is marked with a warning sign 'Hot surfaces' , drawing your attention to this danger.
- **Caution:** When the basket holder is pulled out, hot steam is emitted. Keep your hands away from the area above the unit and do not lean over it.
-  The food itself, the holder and the insert are hot. Always use the handle when touching the holder or basket. Wait for the food to cool down slightly before touching it.
- Always place the basket holder onto a heat-resistant surface.
- This appliance is intended for domestic or similar applications, such as the
 - staff kitchens in shops, offices and other similar working environments,
 - agricultural working environments,
 - by customers in hotels, motels etc. and similar accommodation,
 - in bed-and breakfast type environments.
- Children under 8 must not be permitted to operate this appliance.
- Older children of 8 or more, however, may operate the appliance if they are under constant supervision.

- The appliance may only be used by persons with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance and fully understand all dangers and safety precautions involved.
- Children must not be permitted to play with the appliance.
- Children must not be permitted to carry out any cleaning or maintenance work on the appliance.
- The appliance and its power cord must be kept well away from children under 8 at all times.
- **Caution:** Keep any packaging materials well away from children – such materials are a potential source of danger, e.g. of suffocation.
- Do not leave the deep fryer unattended while in use.
- Every time the appliance is used, the main body including the power cord as well as any attachment fitted should be checked thoroughly for any defects. Should the appliance, for instance, have been dropped onto a hard surface, or if excessive force has been used to pull the power cord, it must no longer be used: even invisible damage may have adverse effects on the operational safety of the appliance. In this case, please contact our customer service.
- Do not place the appliance underneath any wall-cupboards or hanging objects, nor directly by a wall or in a corner.
- Ensure that no inflammable materials are stored in the vicinity.
- **Caution:** Do not allow the appliance or its power cord to touch hot surfaces or to come into contact with any heat sources. Do not allow the power cord to hang free; the cord must be kept well away from hot parts of the appliance.
- Let the appliance cool down sufficiently before moving it.
- **Always remove the plug from the wall socket**
 - after use,
 - in case of any malfunction, and
 - before cleaning the appliance.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.

Intended use


- This appliance must only be used for cooking food. Any other use must be considered improper and may lead to personal injuries or material damage.
- Unlike conventional deep-fryers, this appliance is not intended to be used with oil or fat.

Before using for the first time




- Before using the appliance for the first time, remove any remaining packaging materials and stickers.
- Heat the appliance for 15 minutes to 200 °C without any food. This will lessen the inherent smell of the appliance (see *Using the manual temperature / time selection*).
- Ensure adequate ventilation by opening windows or balcony doors.
- Clean the appliance afterwards as described in *Cleaning and care*.

Preparing the unit



1. Always place the unit on a dry, level, non-slip and heat-resistant surface impervious to contact with the rubber feet.
2. Prepare the food to be air-fried.
3. Insert the plug into the socket.
4. Put the food into the basket with the holder fitted. Make sure you do not exceed the 'MAX' marking.
5. Install the basket holder in the appliance. If it is fitted correctly, a beep signal is heard and the display flashes briefly. Without the holder fitted, the appliance cannot be operated.

6. Press the  key for 2 seconds to turn the fryer on. To switch off, press it again for 2 seconds.

Using automatic programmes









1. Proceed as described under *Preparing the unit* (1-6) and tap the  key.
➔ The first automatic programme shows on the display.
2. Keep tapping the menu key  until the desired programme is shown. Temperature and time alternate in the display.
3. Tap the  key.
➔ The food is now being cooked. The display changes between temperature and remaining running time. Audible beeps indicate that the pre-set processing time has elapsed.

Hint!

To adjust the temperature and time settings individually, press the  key once or twice, and then use the  keys to set the time resp. temperature.

4. Use the handle to remove the basket holder from the fryer.
5. Transfer the cooked food into a heat-resistant container.
6. Allow the basket holder and basket sufficient time to cool down.
7. Remove the plug from the wall socket.
8. Clean the basket holder and basket as described under *Cleaning and care*.

Using the manual temperature / time selection







1. Proceed as described under *Preparing the unit* (1-6) and tap the  key, and then use the / keys to set the minutes.
2. Tap the  key and use the / keys to select the temperature.
3. Tap the  key. The display alternates between temperature and remaining running time.
 The food is now being cooked. Audible beeps indicate that the pre-set processing time has elapsed.
4. Use the handle to remove the basket holder from the air fryer.
5. Transfer the cooked food into a heat-resistant container.
6. Allow the basket holder and basket sufficient time to cool down.
7. Remove the plug from the wall socket.
8. Clean the basket holder and basket as described under *Cleaning and care*.

Useful hints for air-frying

- You can prepare your food using the basic automatic programme settings, or adjust the settings according to the following cooking times.
- Note that these are only approximate times.
Depending on the type of food, the cooking times and temperatures may have to be adjusted. If the food turns out too dark, try lowering the temperature first, before shortening the cooking times.
- There is a wide range of recipe ideas for your fryer



or under www.severin.de/Service/recipes

Symbol	Food	Tips	Temperature	Time
	French fries (deep-frozen)	Turn once	180 °C	20 min
	French fries (fresh)	Turn repeatedly		20 – 25 min
	Chicken parts (fresh)	Turn once	200 °C	20 – 22 min
	Chicken parts (deep-frozen)	Turn once		22 – 25 min, depending on thickness
	Shrimps (fresh)		180 °C	12 min
	Shrimps (deep-frozen)			15 min
	Meat		180 °C	10 – 16 min, depending on thickness
	Small cakes in ovenproof cake-tins		180 °C	13 – 17 min
	Vegetables, eg zucchini carrots	Turn once	160 °C	15 – 17 min
		Turn once		10 – 12 min

Cleaning and care

- Before cleaning the appliance, ensure that the air fryer disconnected from the power supply and has completely cooled down.
- **Caution:** To avoid the risk of electric shock, do not clean the outside of the fryer or its power cord with any liquids and do not immerse either of them in water.
- To prevent scratches to the ceramic coating on the basket and its holder, do not use abrasives or harsh cleaning solutions.
- Press the release on the basket handle and take out the basket.

- The basket and holder should be cleaned with hot soapy water. Wipe thoroughly dry afterwards.
- **Caution:** Do not put any parts in a dishwasher.
- The exterior of the housing and the surface where the basket holder is inserted may be cleaned with a damp, lint-free cloth.

Disposal

Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. This guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.