


SEVERIN

Gebrauchsanweisung	Crêpes Maker (D)
Instructions for use	Crêpe Maker (GB)
Mode d'emploi	Crêpière électrique (F)
Gebruiksaanwijzing	Crêpe Maker (NL)
Instrucciones de uso	Máquina de Crepes (E)
Manuale d'uso	Crêpiera elettrica (I)
Brugsanvisning	Pandekagejern (DK)
Bruksanvisning	Crêpesjärn (S)
Käyttöohje	Ohukaislevy (FIN)
Instrukcja obsługi	Płyta do cienkich naleśników (PL)
Οδηγίες χρήσεως	Κρεπιέρα (GR)
Руководство по эксплуатации	Блинница (RUS)

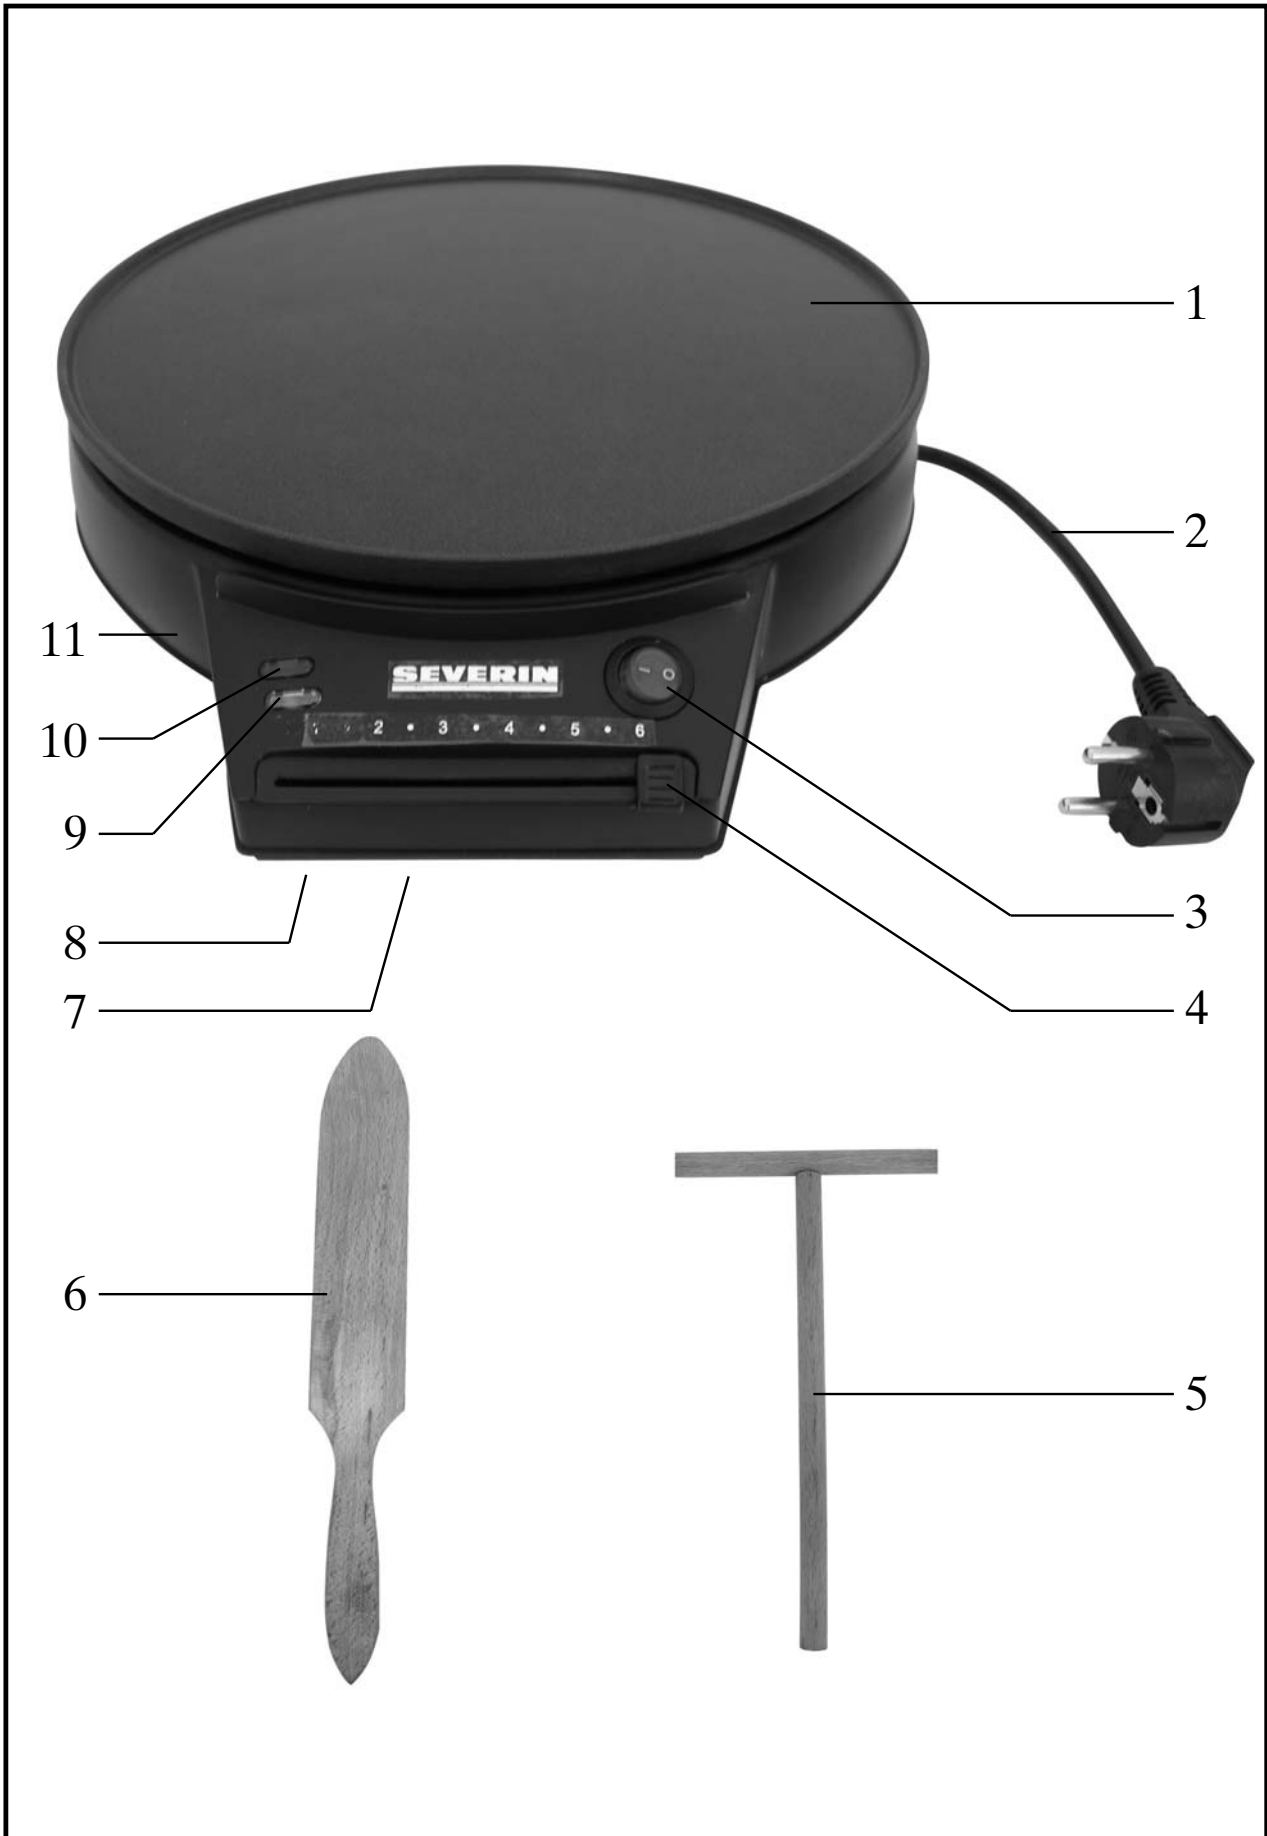



Crêpe Maker

Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

Connection to the mains supply

The appliance should only be connected to an earthed socket installed in accordance with the regulations.

Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance. This product complies with all binding CE labelling directives.

Familiarisation

1. Crêpe-plate
2. Power cord with plug
3. On/Off switch
4. Temperature control
5. Spatula
6. Flip-over tool
7. Rating label
8. Wind-up power cord storage
9. Ready-light, green
10. Main indicator light, red
11. Housing

Important safety instructions

- Before the appliance is used, the main body as well as any attachments fitted should be checked thoroughly for any defects. If the appliance, for instance, has been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on its operational safety.
- The power cord should be regularly examined for any signs of damage. In the event of such damage being found, the appliance must no longer be used.
- **Caution:** the accessible housing surfaces become very hot during operation. Burns can occur from touching the hot parts. Always position the appliance with

sufficient surrounding space. Do not place it directly by a wall or in a corner, or near curtains or similar objects. Keep inflammable objects well away and do not cover the appliance during use.

- Always place the unit on a level, heat-resistant work surface impervious to splashes and stains. Do not place it on surfaces which may be hot, e.g. on hot-plates or next to a gas stove.
- Do not leave the appliance unattended while in use.
- Never attempt to cut the crêpes on the crêpe-plate. To prevent damage to the non-stick coating of the plate, only heat-resistant plastic or wooden implements should be used.
- **Always switch off and remove the plug from the wall socket**
 - after use,
 - in cases of malfunction,
 - during cleaning.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- Do not use the crêpe maker for any purpose other than making crêpes. It is not suitable for frying food.
- Do not operate the appliance outdoors or in humid environments or rooms such as a cellar or garage.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is not intended for use by any persons (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic

use only and not for commercial applications.

- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

Before using for the first time

- Take the appliance and all accessories from their packaging. Remove and dispose of all packing materials.
- **Caution:** Keep packaging well away from children: there is a risk of suffocation.
- Let the appliance heat up for 4 minutes at maximum power. During this initial heating period, a slight smell may be emitted; ensure sufficient ventilation.
- Let the appliance cool down afterwards and clean it as described in the section *General Care and Cleaning*.

Operation

- Unwind the power cord completely.
- Insert the plug into a suitable wall socket.
- Turn the temperature control to its maximum position.
- Use the On/Off switch to turn the appliance on. The red main indicator light comes on. The appliance is now pre-heating.
- Once the pre-set operating temperature has been reached, the green ready-light shows.
- Put a small amount of the crêpe mix onto the crêpe plate and use the spatula to spread the mix evenly out across the plate by swirling it round with a circular motion.
- To keep the cooking temperature at a constant level, the appliance will periodically switch off and on again as indicated by the green ready-light.

- Let the crêpes cook until the surface is no longer liquid and they can be moved easily.
- Slide the flip-over-tool under one third of the crêpe, lift it up and turn it over.
- Cook the other side for a short time until done. To check whether it is ready, use the flip-over-tool to lift it slightly. The crêpe should be clearly cooked, but should not be browned; that way it is easy to fold or roll up.
- Remove the crêpe from the plate.
- Put your topping or spread onto the crêpe and fold or roll it.
- If the crêpe has turned out a bit too dark, use the temperature control to reduce the temperature before cooking another crêpe.
- If no further crêpes are to be cooked, use the On/Off switch to turn the appliance off. Remove the plug from the wall socket and allow the appliance to cool down.

Useful tips

- The spatula should be moistened a little to prevent the crêpe mix sticking to it.
- When attempting the first crêpes, it is advisable to use a little more mix, as thicker crêpes are easier to handle.
- When the crêpe mix is placed onto the plate, the differences in temperature and tension may result in some slight cracking noises. This is normal and no reason for concern.

Recipe

Ingredients:

250 g flour
4 eggs
50 g melted butter
500 ml milk
½ tsp salt
rum essence
1 tbs vanilla sugar

Preparation:

Use a hand blender to mix the flour, eggs,

vanilla sugar, milk and salt. Add the rum essence and the melted butter and whisk until a fine, smooth mix is achieved. Let it rest for about 1 hour before use.

General Care and Cleaning

- Before cleaning the appliance, ensure it is disconnected from the power supply and has completely cooled down.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- Do not use abrasives or harsh cleaning solutions.
 - The housing and the crêpe plate should be wiped with a damp, lint-free cloth.
 - Ensure that the appliance is thoroughly dried before it is stored.

Wind-up power cord storage

A power-cord storage is located underneath the appliance. Unwind the power cord completely before operation. Ensure that the appliance has cooled down completely before winding it up again after thorough cleaning.

Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover

wear and tear, nor breakables such as glass and ceramic items, bulbs etc. This guarantee does not affect your statutory rights, nor any legal rights you may have as a consumer under applicable national legislation governing the purchase of goods. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.