

| | HOME | INSTALLATION REQUIREMENTS | INSTALLATION GUIDE | <u>REPLACEMENT OF</u> <u>FILTERS</u> <u>PROCEDURE</u> | DISCONNECTION PROCEDURE | <u>FILTERS</u> |
|--|------|------------------------------|-----------------------|-------------------------------------------------------------|----------------------------|----------------|
|--|------|------------------------------|-----------------------|-------------------------------------------------------------|----------------------------|----------------|



Hidr@tek[®]

Snowburg Tankless Reverse Osmosis



HOMEINSTALLATION
REQUIREMENTSINSTALLATION
GUIDEREPLACEMENT OF
FILTERS
PROCEDUREDISCONNECTION
PROCEDUREFILTERS
PROCEDURE


Led Light indications

| Light colour | Reason |
|--------------|-------------------------------------------------------------------------|
| Blue Light | Normal working conditions |
| Green light | 3 pre Filters requires replacement |
| Red Light | Leak detection – water spilled when filter was replaced or disconnected |



| HOME INSTALL | | | <u>S</u> | <u>ONNECTION</u> OCEDURE | <u>FILTERS</u> |
|----------------------------------------------------------------------------------|-----------------------------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------|-----------------------------|------------------------|
| PP Sediment Fiber | Block Carbon Cartridge | Block Carbon Cartridge | Reverse Osmosis Membrane | Post Carbon Cartridge | |
| 1 | 2 | 3 | 4 | (5 | |
| Remove large particles suspended in water. (replace every 3–6 months) | Remove organics, chlorine, odor and turbidity | Further remove organics, chlorine, odor and turbidity d) (replace every 6–12 months) | Remove bacteri heavy metals, issolved matter and | of treat salinity. | the taste ted water |



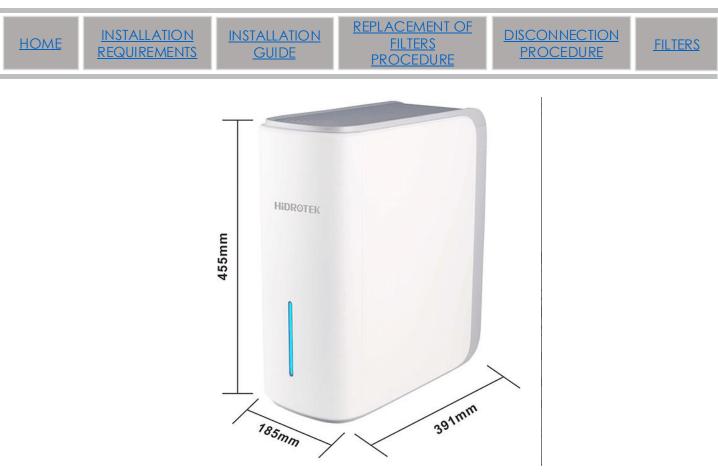

| Capacity | 400 gallons per day |
|---------------------------|---------------------------------|
| 1 st stage | Pp Sediment filter |
| 2 nd stage | Compressed Carbon filter |
| 3 rd stage | Block Carbon filter |
| 4 th stage | Membrane with NSF certification |
| 5 th stage | Post Carbon Filter |
| Dimensions (H x W x D) mm | 455 x 185 x 391 |



INSTALLATION REQUIREMENTS


Appliance requires the following preparations:



Water supply from a water tap/angle valve with ½" connection



13amp plug socket

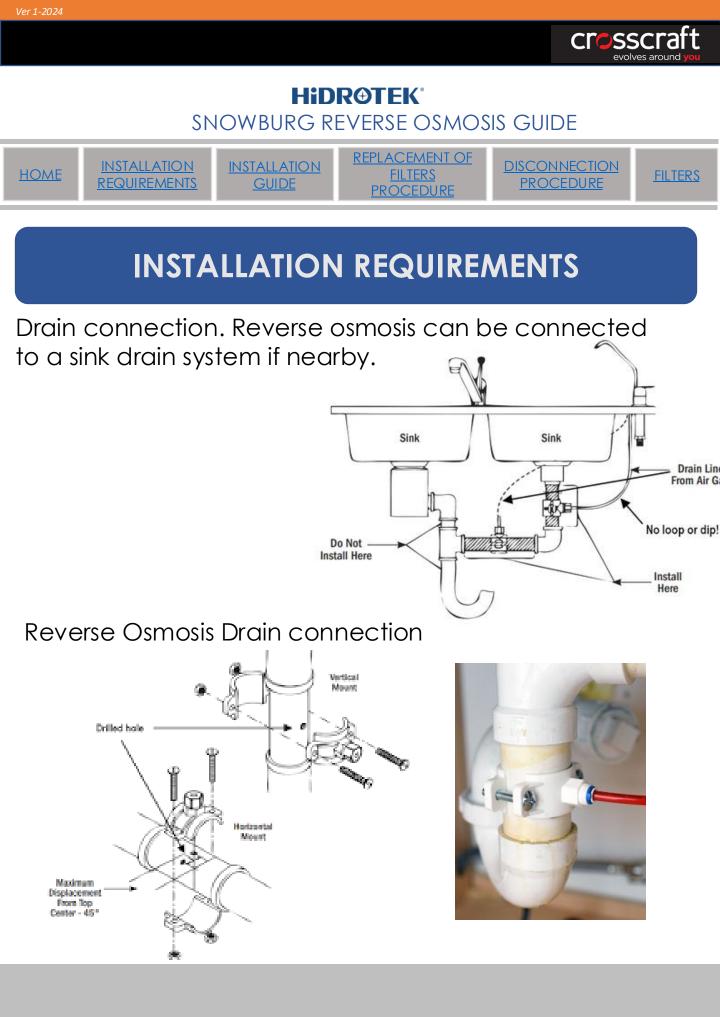



| HOME | INSTALLATION REQUIREMENTS | INSTALLATION GUIDE | <u>REPLACEMENT OF</u> <u>FILTERS</u> <u>PROCEDURE</u> | DISCONNECTION PROCEDURE | <u>FILTERS</u> |
|------|------------------------------|-----------------------|-------------------------------------------------------------|----------------------------|----------------|
| | | | | | |

INSTALLATION PROCEDURE

What is included in the packaging:



Six Filter Cartridges

Includes spun PP filter(PP), block carbon filter(CTO), coconut carbon filter(CTOS),2pcs x reverse osmosis membrane(RO), and post activated carbon filter(T-33).



Main Body

One Accessory Box

Includes faucet, 3-way ball valve, three pipes, instruction book, adapter and drain clamp

Images of accessories for reference:









Goose faucet









3 pipes (red, blue and white)



Drain clamp

Adapter









Cutting and Connection of pipes video:

https://youtu.be/FOr0oXXZkZ8

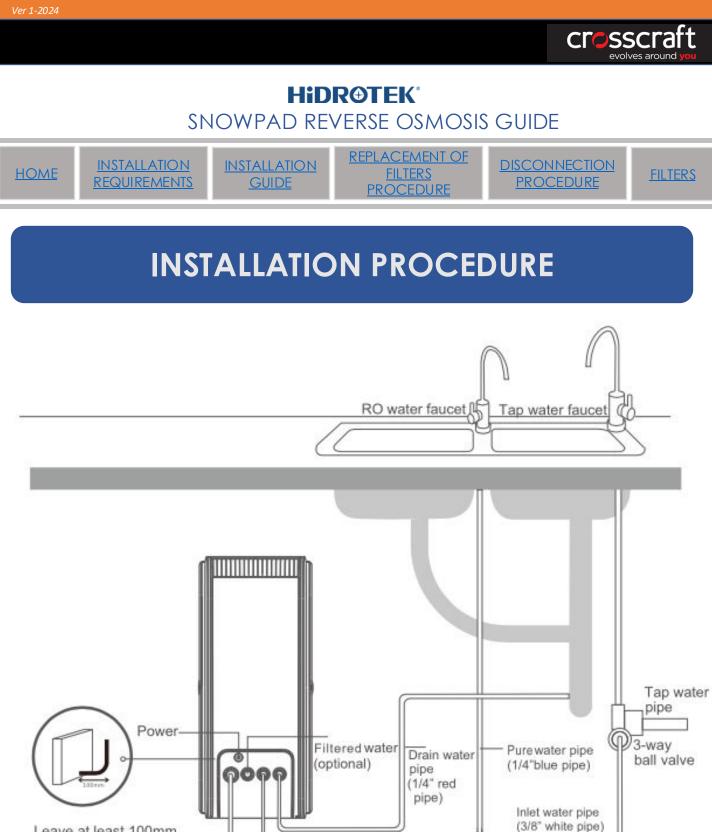

Leave at least 100mm space at the back of products for bending pipes

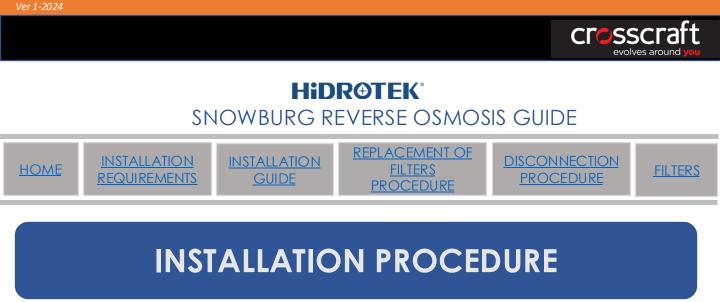


Installing the feed water tap:

1..Install Tee Fitting and Feed Water Valve as per diagram.

2..Wrap threads of Feed Water Valve and Tee Fitting with Teflon tape.


Connect White Feed Water Tubing from unit to Feed Water Valve.
 Install the Feed water valve Tee fitting, and then connect to source water.

NOTE: Use only a supply as Feed Water, hot water will damage your unit. Softened Feed Water will extend the life of the RO Membrane \cdot

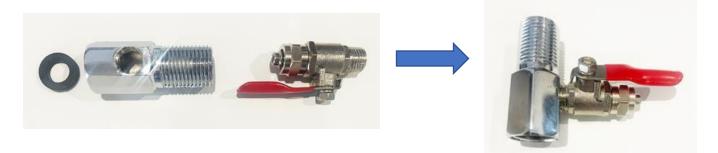

Installing the feed water tap video:

https://youtu.be/WewK8S1kqQs

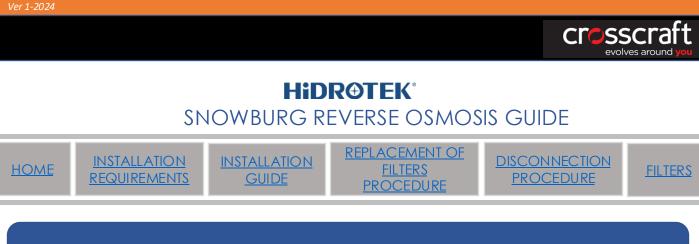


INSTALLATION PROCEDURE

Installing goose faucet:

- 1..Select a convenient location near your sink to place the faucet.
- 2..Drill a hole 12mm in diameter in counter top.
- 3..Place washers, plates, seals and nuts in order as per diagram and tighten on to counter
- *4..* Attach Blue Pure Water tubing to the bottom of faucet and connect tubing to unit.

CAUTION: Check that tubing is connected correctly.

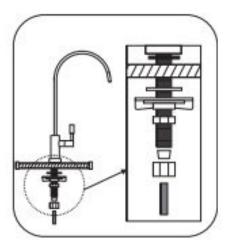




Installing the RO pipe to the goose faucet:



Installing goose faucet video: https://youtu.be/_TRsZ9VapjE

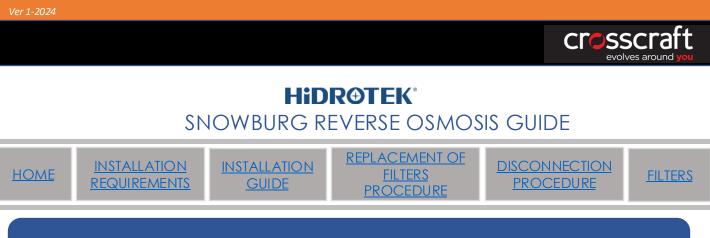

INSTALLATION PROCEDURE

Installing video of drain clamp saddle: https://youtu.be/zOsRXLczMWU

Installing drain clamp:

1..Place drain clamp on drain pipe above the drain trap and tighten securely.

2..Using the drain clamp as a guide, drill a 6mm hole, enough for the 1/4" tubing to pass through one side of the drain pipe. DO NOT drill through both sides.

3..Connect Red Waste Water tubing from unit to Drain Clamp.

CAUTION: When cutting the tubing, make it clean, square. cuts , failing to do so result in poor connection and possible leaks.

The lowest point of the line should be the point of connection to the Drain Clamp.

There should be no sag in the line as this may cause excessive noise as the reject water is owing to drain.








FILTERS PLACEMENT INSTALLATION





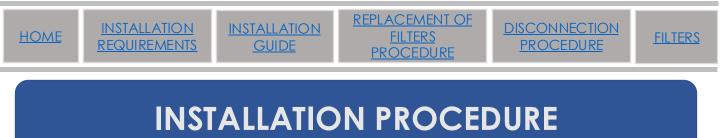

FILTERS PLACEMENT INSTALLATION






| HOME | INSTALLATION REQUIREMENTS | INSTALLATION GUIDE | <u>REPLACEMENT OF</u> <u>FILTERS</u> <u>PROCEDURE</u> | DISCONNECTION PROCEDURE | <u>FILTERS</u> |
|------|------------------------------|-----------------------|-------------------------------------------------------------|----------------------------|----------------|
| | | | | | |


REPLACEMENT OF FILTERS

Cartridges Replacement

Please cut off the water, turn off the power, open RO water faucet and discharge water in pipeline before replacing cartridges.

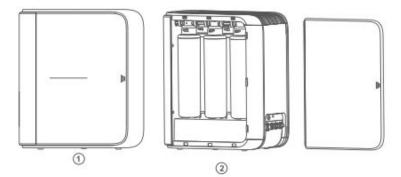


2. Lift up cartridge 30°, rotate anticlockwise then remove it.

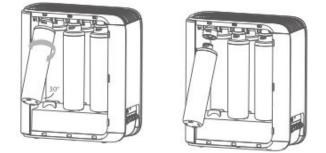

3. Install new cartridge by rotating clockwise according to specifications, then fix the side board.





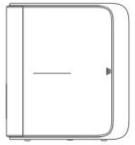

Note: Please reset cartridges after replacement.





FILTERS PLACEMENT INSTALLATION








FILTERS PLACEMENT INSTALLATION





HOMEINSTALLATION
REQUIREMENTSINSTALLATION
GUIDEREPLACEMENT OF
FILTERS
PROCEDUREDISCONNECTION
PROCEDUREFILTERS
FILTERS

REPLACEMENT OF FILTERS

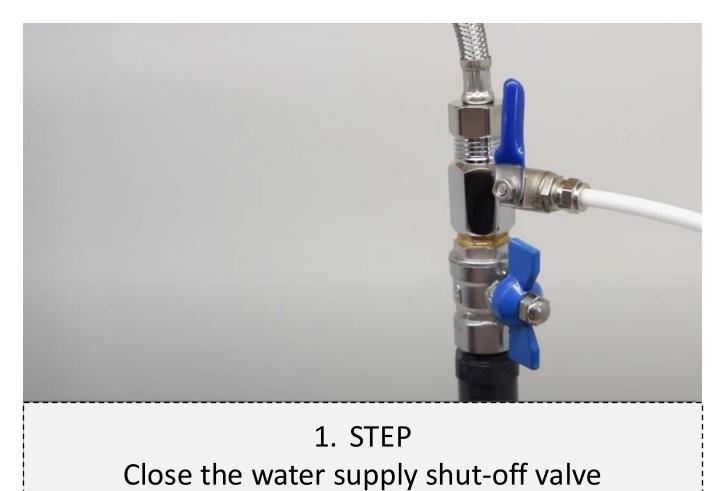



REPLACEMENT OF


| HOME | INSTALLATION REQUIREMENTS | INSTALLATION GUIDE | <u>FILTERS</u> <u>PROCEDURE</u> | DISCONNECTION PROCEDURE | <u>FILTERS</u> |
|------|------------------------------|-----------------------|------------------------------------|----------------------------|----------------|
| | REF | PLACEME | ENT OF FIL | TERS | |
| | | | | | |
| | | | | | 1 |
| | | | | | |
| | | 2 | STED | | |

2. STEP Unplug the appliance power supply from the <u>electricity socket</u>



 HOME
 INSTALLATION REQUIREMENTS
 INSTALLATION GUIDE
 REPLACEMENT OF FILTERS PROCEDURE
 DISCONNECTION PROCEDURE
 FILTERS

REPLACEMENT OF FILTERS

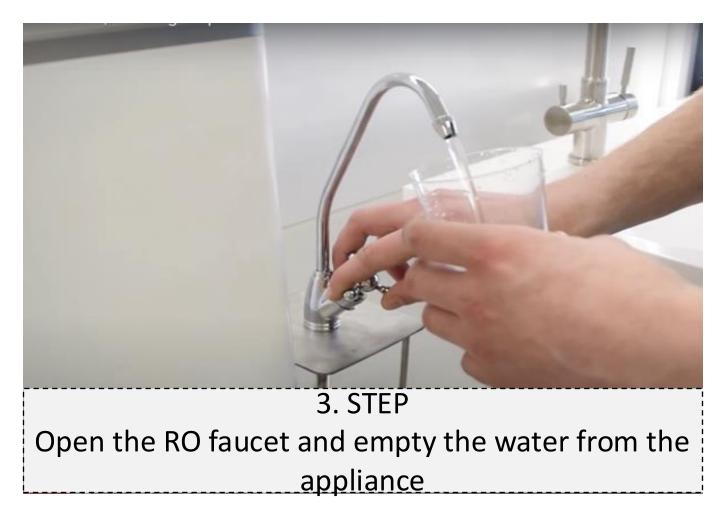



REPLACEMENT OF INSTALLATION **DISCONNECTION** INSTALLATION **FILTERS** <u>HOME</u> **FILTERS** REQUIREMENTS GUIDE PROCEDURE PROCEDURE **REPLACEMENT OF FILTERS Hidr@tek** Tilt-Out Bayonet Filter Cartridges, Replacing in Seconds

4. STEP Lift cartridge 30Deg , rotate and remove – Replace the cartridges



| HOME | INSTALLATION REQUIREMENTS | INSTALLATION GUIDE | <u>FILTERS</u> <u>PROCEDURE</u> | DISCONNECTION PROCEDURE | <u>FILTERS</u> |
|------|------------------------------|-----------------------|------------------------------------|----------------------------|----------------|
| | REF | PLACEM | ENT OF FIL | TERS | |
| | | | | | |
| | | | | | |
| | | | | | |

5. STEP Plug the appliance back into the electricity socket



 HOME
 INSTALLATION REQUIREMENTS
 INSTALLATION GUIDE
 REPLACEMENT OF FILTERS PROCEDURE
 DISCONNECTION PROCEDURE
 FILTERS

 REPLACEMENT OF FILTERS



Open the water supply shut-off valve



| HOME | REQUIREMENTS | INSTALLATION GUIDE | <u>FILTERS</u> <u>PROCEDURE</u> | DISCONNECTION PROCEDURE | FILTERS | | |
|------------------------|--------------|-----------------------|------------------------------------|----------------------------|---------|--|--|
| REPLACEMENT OF FILTERS | | | | | | | |



10. STEP Slowly open the clean water faucet and let the water run for at least 15 minutes



HOMEINSTALLATION
REQUIREMENTSINSTALLATION
GUIDEREPLACEMENT OF
FILTERS
PROCEDUREDISCONNECTION
PROCEDUREFILTERS
FILTERS

DISCONNECTION PROCEDURE



Close the water supply shut-off valve



HOMEINSTALLATION
REQUIREMENTSINSTALLATION
GUIDEREPLACEMENT OF
FILTERS
PROCEDUREDISCONNECTION
PROCEDUREFILTERS
PROCEDUREDISCONNECTION
PROCEDUREDISCONNECTION
PROCEDUREDISCONNECTION
PROCEDURE



Unplug the water filter adapter from the electricity socket



HOMEINSTALLATION
REQUIREMENTSINSTALLATION
GUIDEREPLACEMENT OF
FILTERS
PROCEDUREDISCONNECTION
PROCEDUREFILTERS
PROCEDURE

DISCONNECTION PROCEDURE





REPLACEMENT OF INSTALLATION **INSTALLATION DISCONNECTION FILTERS** <u>HOME</u> **FILTERS** REQUIREMENTS GUIDE PROCEDURE PROCEDURE **DISCONNECTION PROCEDURE**

4. STEP Press ring around pipe fitting inwards and pull out

Disconnecting TUBE from fitting – How to video:

https://youtu.be/cnKpiKj_HeE





Qty 2 of HDPRO-10CF-200G

35

Reverse Osmosis Membrane

HDPCTOS-10CF

2

Snowburg filter - Crosscraft website- Click here for prices