# KENWOOD

## TYPE: FDP22



English	2 - 6
عربي	\\ - V













## English

## Safety

- Read these instructions carefully and retain for future reference.
- Before using for the first time, remove all packaging and any labels, including plastic blade covers. Wash the parts: see 'Cleaning'.
- If the plug or cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer in order to avoid a hazard.
- DO NOT touch the sharp blades. The blade and disc are very sharp, handle with care. Always hold by the finger grip at the top, away from the cutting edge, when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance is not suitable for processing ice cubes.
- Before lifting or carrying the appliance by the handle on the lid, always check that the bowl and lid are securely locked in place.
- Ensure the cord is fully unwound before using the appliance.
- DO NOT process hot ingredients.
- Be careful if hot liquid is poured into the food processor bowl as it can be ejected out of the appliance due to sudden steaming.
- Never leave the appliance unattended when it is operating.
- Do not move appliance whilst in operation.
- Do not exceed the maximum capacities stated in the recommended usage chart.
- Do not operate your appliance for longer than
  30 seconds when processing dough without a rest period. Processing continuously for longer periods can damage your appliance.
- Always remove the knife blade before pouring contents from the bowl.
- Keep hands and utensils out of the processor bowl whilst connected to the power supply.
- If food needs to be pushed down use a suitable utensil such as a spatula.
- Always switch off the appliance and disconnect from the supply if it is left unattended and before assembling, disassembling or cleaning.
- CAUTION: Before removing the lid from the bowl wait until the attachment/blades have completely stopped.
- Never use your fingers to push food down the feed tube. Always use the pusher supplied.
- Do not use excessive force to push food down the feed tube you could damage your appliance.
- Do not use the lid lock to operate the processor, always use the on/off speed control.
- Do not operate the processor with the both the knife blade and disc fitted. Use only one attachment at a time.
- This appliance will be damaged and may cause injury if the interlock mechanism is subjected to excessive force.
- Never use an unauthorised attachment.
- Never use a damaged appliance. Get it checked or repaired: see 'Service and customer care'.

- Never let the power unit, cord or plug get wet.
- Do not let excess cord hang over the edge of a table or worktop or touch hot surfaces.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Only use the appliance for its intended domestic use. Kenwood will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
- Misuse of your processor can result in injury.

#### **Express Serve**

- Avoid contact with moving parts. Keep fingers out of the food outlet opening.
- Do not operate without the slinger plate fitted. If the slinger plate is not fitted food will clog under the plate and not exit the food outlet, resulting in damage to your attachment.
- If the food is not exiting the food outlet, switch off and check that food is not clogging under the disc and the slinger plate is fitted. Clear any trapped food before continuing to process.
- Do not run the Express Serve attachment continuously for longer than 2 minutes. Leave to cool for 2 minutes in between each 2 minute operation.

Cleaning (refer to illustration X)

- Always switch off and unplug before cleaning.
- Wipe the power unit with a damp cloth, then dry. Ensure that the interlock area is clear of food debris.
- Do not immerse the power unit in water.
- Handle the blade and cutting discs with care they are extremely sharp.

#### Before plugging in

• Make sure your electricity supply is the same as the one shown on the underside of the power unit.

#### Important - Plug and Fuse Information

- The wires in the cord are coloured as follows: Blue = Neutral, Brown = Live.
- If the plug is cut off it must be DESTROYED IMMEDIATELY. An electric shock hazard may arise if an unwanted non-rewireable plug is inadvertently inserted into a socket outlet.
- If the plug supplied with your appliance has a fuse fitted and the fuse fails it must be replaced with one of the same rating.

#### Note:

For non-rewireable Plug Type G the fuse cover MUST be refitted when replacing the • fuse. If the fuse cover is lost then the plug must not be used until a replacement can be obtained. The correct fuse cover is identified by colour and a replacement may be obtained from your Kenwood Authorised Repairer (see Service).



#### Plug Type G

This appliance conforms to EC Regulation 1935/2004 on materials and articles intended to come into contact with food.

## Key

- Pusher
- Feed tube
- Lid
- Knife blade
- Bowl
- Power unit
- Cord clip
- 123456789 Grating/slicing disc
- Lid handle
- On/off switch + Pulse

## Express Serve (if supplied)

- Slinger plate
- (12) Food outlet
- (13) Express Serve Bowl

## To Use Your Food

#### Processor

Main bowl

## Refer to Illustrations A - N

#### Important

- Your processor is not suitable for crushing or grinding coffee beans, or converting granulated sugar to caster sugar.
- When adding almond essence or flavouring to mixtures avoid contact with the plastic as this may result in permanent marking.

#### Hints & tips

- Use the pulse (P) for short bursts. The pulse will operate for as long as the control is held in position.
- Some foods may discolour the plastic. This is perfectly normal and will not harm the plastic or affect the flavour of your food. Rub with a cloth dipped in vegetable oil to remove the discolouration.

## Knife Blade

- Bread Dough Place the dry ingredients in the bowl first and then add the liquid. Process until a smooth elastic ball of dough is formed
- Use the handle on the lid to support if the appliance starts to move on the worktop.
- For coarser textures use the pulse control.
- Take care not to over-process.
- When making pastry use fat straight from the fridge cut into 2cm cubes.

#### Prune Marinade

300g Honey, 50g Prunes and 50ml Water.

Store in fridge overnight.

Process for 4 seconds using Pulse

## Express Serve/Disc

## Refer to Illustrations O - T

- Use fresh ingredients
- Do not cut food too small. Fill the width of the feed tube fairly full. This prevents the food from slipping sideways during processing.
- There will always be a small amount of unprocessed food on the disc or in the bowl after processing.

## Cord Adjustment

## Refer to Illustration V

• Wrap the cord around the base of the processor to the desired length and clip the cord together using the cord clip.

## Storage W

After use the knife blade and disc can be stored together in the bowl. Do not operate the processor, with both the knife blade and disc fitted. Use only one attachment at a time.

## Service and Customer Care

#### UK

If you need help with:

- using your appliance or
- servicing, spare parts or repairs (in or out of guarantee)
- call Kenwood customer care on 0345 222 0458. Have your model number
  (e.g. TYPE: FDP22) and date code (5 digit code e.g. 23T01) ready. They are on the underside of the power unit.
- spares and attachments
- 🖀 call 0844 557 3653.

#### Other countries

- If you experience any problems with the operation of your appliance, before requesting assistance refer to the 'Troubleshooting Guide' section in the manual or visit www.kenwoodworld.com.
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.
- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit www.kenwoodworld.com or the website specific to your Country.
- Designed and engineered by Kenwood in the UK.
- Made in China.



#### IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

#### **Guarantee UK only**

- If your food processor goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:
- it has been used in accordance with these instructions.
- you have not misused, neglected, or damaged it;

- it has not been modified (unless by KENWOOD);
- it is not second hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- you supply your receipt to show when you bought it.

This guarantee does not affect your statutory rights.

Troubleshooting Guide			
Problem	Cause	Solution	
The processor will not	No Power.	Check processor is plugged in.	
operate.	Bowl not fitted to power unit correctly.	The processor will not operate if the bowl or lid are not fitted correctly into the interlock.	
	Bowl lid not locked on correctly.	Check that the bowl and lid are aligned and interlocked correctly.	
Processor stops during processing.	Processor overloaded/ maximum capacities exceeded.	Check maximum capacities stated in the recommended usage chart.	
	Lid unlocked.	Check lid is locked on correctly.	
Can not fit the bowl to the base, with the lid fitted.	The On/off switch is in the 'On' position.	Move the switch to the 'off' position.	
Food not exiting the outlet of the express serve.	The slinger plate is not fitted under the grating/ slicing disc.	Fit the slinger plate.	
Slice or grated food damaged by the knife blade.	Operating with the knife blade and disc fitted in the bowl.	Remove the knife blade before using the grating/slicing disc.	
Unit unstable/ heavy vibrations and movement.	Processing dough for too long. Processor overloaded/ maximum capacities exceeded.	Use the handle on the lid to support if the appliance starts to move on the worktop. Do not process doughs for longer than 30 seconds and do not exceed maximum quantity recommended in the usage chart.	
	Re-kneading dough.	Re-knead by hand only. Re-kneading in the bowl is not recommended as it may cause the processor to become unstable.	
	Sticky fruit/ingredients such as dates being processed.	For best results use 'Pulse' first to break down the ingredients and then use continuous operation.	
Heavy splashing or ingredients ejected from the feed tube.	Pusher not fitted.	Always fit the pusher when processing dough, pastry and cakes to prevent splashing from the feed tube .	
Poor performance of the knife blade and disc.	Refer to the Hints and tip section and follow the recommendation in the usage chart.		

ليل اكتشاف المشكلات وحلها				
الحل	السبب	المشكلة		
تحققي من السلك الكهربائي وأنه موصل بمنفذ التيار الكهربائي.	الجهاز غير موصل بمصدر تيار كهربائي.	جهاز تحضير الطعام لا يعمل.		
لن يعمل جهاز تحضير الطعام إذا لم يتم تركيب السلطانية أو الغطاء العلوي بشكل صحيح في القفل.	السلطانية غير مركبة على وحدة الطاقة (الموتور) بشكل صحيح.			
تحققي منَّ محاذاة السلطانية والغطاء العلوي وتعشيقهما بشكل صحيح.	غطاء السلطانية غير مركب بشكل صحيح.			
تحققي من السعات القصوى الموصى بها والمحددة في جدول السرعات.	تجاوز حد التحميل لجهاز تحضير الطعام/تجاوز السعات القصوي	توقف جهاز تحضير الطعام أثناء التشغيل.		
تحققي من غلق الغطاء بشكل صحيح.	تم فتح الغطاء العلوي.			
أعيدي المفتاح إلى وضع "off" (الإيقاف).	مفتاح التشغيل/إيقاف التشغيل في وضع "On" (التشغيل)	لا يمكن تركيب السلطانية في القاعدة، مع تركيب الغطاء العلوي.		
ركبّي سطح الرفع.	سطح الرفع غير مُركَّب تحت قرص البَشر/التقطيع	الطعام لا يخرج من مخرج ملحق Express Serve.		
أزيلي شفرة السكين قبل استخدام قرص البَشر/ التقطيع.	التشغيل مع تركيب شفرة السكين والقرص في السلطانية.	تلف الطعام المقطَّع أو المبشور بشفرة السكين.		
استخدمي المقبض الموجود على الغطاء العلوي للدعم إذا بدأ الجهاز في التحرك على سطح العمل.	تحضير العجين لفترة طويلة جدًا.	الوحدة غير مستقرة/اهتزازات وحركة شديدة.		
لا تحضّري العجين لمدة تزيد عن ٣٠ ثانية ولا نتجاوزي الكمية القصوى الموصى بها في مخطط الاستخدام.	تجاوز حد التحميل لجهاز تحضير الطعام/تجاوز السعات القصوي			
أعيدي العجن باليد فقط. لا يُنصح بإعادة العجن في السلطانية لأن ذلك قد يتسبب في عدم ثبات جهاز تحضير الطعام.	إعادة عجن العجين.			
للحصول على أفضل النتائج، استخدمي "التشغيل النبضي" أولاً لتكسير المكونات ثم استخدمي التحضير المستمر.	تحضير الفاكهة/المكونات اللزجة مثل البلح.			
قومي دائمًا بتركيب عصا دفع المكونات عند تحضير العجين والمعجنات والكعك لمنع التناثر من أنبوب التغذية.	عدم تركيب عصا دفع المكونات.	تناثر كثيف أو خروج المكونات من أنبوب التغذية.		
ح واتبعي التوصيات الواردة في مخطط	ارجعي إلى قسم تلميحات ونصاً: الاستخدام.	ضىعف أداء شفرة السكين والقرص.		

- ملحق Express Serve/القرص راجعي الرسوم التوضيحية من ] إلى ] • استخدمي مكونات طازجة
- لا تقطعي المكونات إلى قطع صغيرة جدًا.
  الملئي عرض أنبوب التغذية بحيث يكون ممتلئًا تمامًا.
   فهذا يحول دون انزلاق الطعام إلى الجوانب أثناء التحضير.
  - تتبقى دائمًا كمية صغيرة من الطعام غير المحضَّر على القرص أو في السلطانية بعد التحضير.
- تعديل السلك ارجعي إلى الرسم التوضيحي **∨** • لفّي السلك حول قاعدة جهاز تحضير الطعام بالطول المطلوب واشبكي السلك معًا باستخدام مشبك السلك.

## التخزين w

بعد الأستخدام، يمكن تخزين شفرة السكين والقرص معًا في السلطانية. لا تشغّلي جهاز تحضير الطعام مع تركيب شفرة السكين والقرص. استخدمي فقط ملحقًا واحدًا في كل مرة.

## الصيانة ورعاية العملاء

- في حالة مواجهة أية مشكلة متعلقة بتشغيل الجهاز، قبل الاتصال لطلب المساعدة، يرجى مراجعة قسم «دليل اكتشاف المشكلات وحلها» في الدليل أو زيارة موقع الويب www.kenwoodworld.com.
  - يرجى الملاحظة بأن جهازك مشمول بضمان، هذا الضمان يتوافق مع كافة الأحكام القانونية المعمول بها والمتعلقة بحقوق الضمان والمستهلك في البلد التي تم شراء المنتج منها.
- في حالة تعطل منتج Kenwood عن العمل أو في حالة وجود أي عيوب، فيرجى ارساله أو احضاره إلى مركز خدمة معتمد من KENWOOD. للحصول على معلومات محدثة حول أقرب مركز خدمة معتمد من KENWOOD، يرجى زيارة موقع الويب www.kenwoodworld.com، أو موقع الويب المخصص لبلدك.
  - تمت الأعمال الهندسية والتصميم من قبل شركة Kenwood في المملكة المتحدة.
    صنم في الصين.



معلومات مهمة عن الكيفية الصحيحة للتخلص من المنتج وفقًاً لتوجيهات الاتحاد الأوروبي المتعلقة بنفايات المعدات الكهربائية والإلكترونية (WEEE) في نهاية العمر التشغيلي للجهاز، يجب عدم التخلص من الجهاز في نفايات المناطق الحضرية. بل يجب أخذه إلى مركز تجميع خاص بجهة محلية متخصصة في التخلص من هذه النفايات أو إلى تاجر يقدم هذه الخدمة. هام – المقبس والمنصهر الكهربي ● إذاٍ كان القابس المزود في جهازك به مصهر مُركب وتعطل هذا المصهر، فيجب استبداله بمصهر مماثل له بنفس تقدير

- في حالة الحاجة إلى استبدال المقبس أو السلك الكهربي، فيجب استبدالهما وتركيبهما من قبل مركز صيانة متخصص معتمد لدى Kenwood. ملاحظة
- ملاحصة. بالنسبة إلى المقابس غير القابلة لإعادة تركيب الأسلاك الجديدة بها،، يجب إعادة تثبيت غطاء المنصهر الكهربي عند استبداله. في حالة فقد غطاء المنصهر الكهربي، يجب عدم استخدام المقبس إلا أن يتم الحصول على بديل. يتم تحديد غطاء المنصهر الكهربي الصحيح حسب اللون ويمكن الحصول على بديل من مركز صيانة متخصص معتمد لدى Kenwood (يرجى مراجعة قسم الخدمة). إذا تم قطع مقبس غير قابل لإعادة تركيب الأسلاك الجديدة به، فيجب تدميره على الفور. إذا تم إدخال قابس غير قابل لإعادة التمديد عن غير قصد في مخرج المقبس، فقد قد ينشئ خطر حدوث صدمة كهربائية. يتوافق هذا الجهاز مع تنظيمات الاتحاد الأوروبي 2004/1935 المتعلقة بالمواد والأجسام المتلامسة مع الأطعمة.
- - قبل الاستعمال للمرة الاولى
  - أزيلى أغطية النصل البلاستيكية عن سكين التقطيع. توخى الحذر فالشفرات حادة حداً. يجب التخلص من هذه الأغطية حيث أنها مزودة لَّحْمَاية الشفرَّة أثناء التصنيع والنَقل. اغسلي الأجزاء "التنظيف".
    - ۲ تأكدي من أن السلك مفكوك بالكامل قبل ٣ استخدام الجهاز.
      - مفتاح الرموز
      - عصا دفع الطعام
        - (2) انبوب التغذية
        - (3) الغطاء العلوي
        - شفرة السكين (4)
          - (5) السلطانية

استخدام جهاز تحضير الطعام السلطانية الرئيسية راجعي الرسوم التوضيحية من A إلى N ملاحظة هامة

- جهاز تحضير الطعام غير ملائم لطحن حبوب القهوة أو تحويل حبيبات السكر إلى سكر بودرة.
- عند إضافة روح أو نكهة اللوز للخلطات، تجنبي ملامسته للبلاستيك حيث قد يؤدى ذلك إلى ترك علامات مستديمة على البلاستيك.

تلميحات ونصائح

- استخدمي مفتاح وضع التشغيل النبضي (P) للتشغيل لفترات قصيرة. يعمل وضع التشغيل النبضى طوال فترة الضغط على مفتاح التحكم.
- قد تؤدي بعض الأطعمة إلى تغير لون البلاستيك. هذا الأمر طبيعي تمامًا ولن يضر البلاستيك أو يؤثر على نكهة طعامك. افركيه بقطعة قماش مغموسة بالزيت النباتي لإزالة اللون.

- ⑥ وحدة الطاقة (الموتور)
  - (7) مشبك السلك
  - 8) قرص البَشر/التقطيع
  - مقبض الغطاء العلوي 9
- مفتاح التشغيل/الإيقاف + وضع التشغيل (10)النبضى

(في حالة تزويده) Express Serve

- (11) سطح الرفع
- (12) مخرج الطعام
- Express Serve سلطانية

سكين التقطيع عجين الخبز - ضعى المكونات الجافة في السلطانية أولاً ثم أضبقى السائل. حضرّي أ العجينة حتى تتكوّن كرة ناعمة ومرنة.

- استخدمي المقبض الموجود على الغطاء العلوي للدّعم إذا بدأ الجهاز في التحرك على سطح العمل.
- للحصول على قوام خشن، استخدمي وضع
  - التشغيل النبضي. توخي الحذر حتى لا تتجاوزي الفترة المطلوبة لتحضير الطعام.
- عند تحضير المعجنات استخدمى الدهون مباشرة من المجمد مع تقطيعها في صورة مكعبات بحجم تقریبی ۲سم.

ماريناد البرقوق المجفف ۳۰۰ جرام عسل، و٥٠ جرام برقوق مجفف، و٥٠ مل ماء. يحفظ في الثلاجة طوال الليل. شغلى لمدة ٤ ثوان على وضع التشغيل النبضى

- لا تشغَّلي جهاز تحضير الطعام مع تركيب شفرة السكين والقرص. استخدمي فقط ملحقًا واحدًا في كل مرة.
  - سيتلف الجهاز وقد تحدث إصابات في حالة تعرض آلية التعشيق لقوة مفرطة.
    - يحذر استخدام أى ملحقات غير معتمدة.
  - يحذر استخدام الجهاز في حالة تلفه. في مثل هذه الحالة، يجب فحص الجهاز أو إصلاحه: راجعي قسم «الصيانة ورعاية العملاء».
    - يحظر تعرض وحدة الطاقة أو السلك الكهربي أو قابس التوصيل للماء.
    - لا تسمحي بتدلى السلك الكهربي الزائد عن طاولة العمل ولا تسمحي له أيضاً بالتلامس مع أسطح
      - يجب الإشراف على الأطفال للتأكد من عدم عبثهم بالجهاز.
    - لا يجوز استخدام هذا الجهاز من قبل الأطفال. احتفظي بالجهاز والسلك الكهربي بعيداً عن متناول الأطفال.
- يمكن استخدام الأجهزة من قبل أشخاص ذوى قدرات جسدية أو حسية أو عقلية منخفضة وممن هم دون خبرة أو معرفة باستخدام الأجهزة في حالة منحهم التعليمات الخاصة بالاستخدام أو الإشراف عليهم بحيث يمكنهم استخدامه بطريقة آمنة مع إدراك المخاطر التي تنطوي على استخدام الجهاز.
  - استخدمي الجهاز فقط في الاستخدامات المنزلية المخصص لها. لن تتحمل شركة Kenwood أية مسئولية في حالة استخدام الجهاز بطريقة غير صحيحة أو عدم الامتثال للتعليمات المذكورة.
    - قد يؤدي سوء استخدام جهاز تحضير الطعام إلى حدوث إصابة.

#### ملحق Express Serve

- تجنبى ملامسة الأجزاء المتحركة. ضعى أصابعك خارج فتحة مخرج الطعام.
- لا تشُغَّلي الجهاز بدُون تركيب سطح الرَّفع. إذا لم يتم تركيب سطّح الرفع فسوف تتجمع الأطعمة تحت قرص التقطيع ولا تخرج من مخرج الطعام، مما يؤدي إلى تلفُّ الملحق.
  - إذا كان الطعام لا يخرج من مخرج الطعام، أوقفي التشغيل وتحققي من عدم انحشار الطعام أسفل القرص ومن تركيب سطح الرفع. أزيَّلي أي طعام محشَّور قبل مواصلة التحضير.
- لا تشغلي ملحق Express Serve بشكل مستمر لمدة تزيد عن دقيقتين. اتركيه ليبرد لمدة دقيقتين بين كل دقيقتين من التشىغيل.

التنظيف (ارجعي إلى الرسم التوضيحي X)

- أوقفي دائماً تشغيل الجهاز وافصليه عن مصدر التيار الكهربي قبل التنظيف. امسحي وحدة الطاقة (الموتور) بقطعة قماش مبللة، ثم جففيها. تأكدي من خلو منطقة الغلق من بقايا الطعام.
  - لا تقومي بغمر وحدة الطاقة (الموتور) في الماء.

توخى الحذر أثناء التعامل مع الشفرات وأقراص التقطيع – هذه الأجزاء حادة جدا.

**عربي** قبل قراءة التعليمات الرجاء فقتع الصفحة الامامية التي تحتوي على الرسومات التوضيحية

لسلامتك

- اقرئي التعليمات التالية واحتفظي بها في المتناول للاستخدامات المستقبلية المرجعية.
- قبل الاستخدام لأول مرة، أزيلي كل مواد التغليف وأي ملصقات بما في ذلك أغطية الشفرات البلاستيكية. اغسلى الأجزاء: انظري "التنظيف".
  - لأسباب متعلقة بالسلامة ولتجنب حدوث أية مخاطر، في حالة تلف السلك الكهربي أو القابس، يجب استبداله بواسطة Kenwood أو مركز خدمة معتمد من قبل Kenwood.
- لا تلمسي الشفرات الحادة. شبكة التقطيع والأقراص حادة للغاية، تعاملي معها بحذر. أمسكي الجهاز من خلال المقبض الموجود في الأعلى، بعيدًا عن حافة التقطيع، عند التعامل مع شفرات التقطيع الحادة، وعند تفريغ الوعاء، وأثناء التنظيف.
  - هذا الجهاز غير مناسب لمعالجة مكعبات الثلج.
- قبل رفع الجهاز أو حمله من المقبض الموجود على الغطاء العلوي، تأكدي دائمًا من قفل السلطانية والغطاء العلوي بإحكام في مكانهما.
  - تأكدي من أن السلك مفكوك بالكامل قبل استخدام الجهاز.
    - لا تستخدمى مكونات ساخنة أثناء التحضير.
- توخي الحذر إذا تم سكب السائل الساخن في سلطانية جهاز تحضير الطعام لأنه قد يخرج من الجهاز بسبب التبخير المفاجئ.

- لا تحركي الجهاز أثناء التشغيل.
- لا تتجاوزي السعات القصوى الموصى بها والمحددة في جدول الاستخدام.
- لا تشغلي الجهاز لمدة تزيد عن ٣٠ ثانية أثناءً تحضير العجين بدون فترة راحة. استمرارية معالجة المزيد من المكونات لفترة زمنية أطول قد يتسبب في تلف الجهاز.
  - أزيلي سكين التقطيع دائما قبل صب المحتويات من السلطانية.
  - اجعلي يديك والأواني خارج السلطانية أثناء التوصيل بمصدر التيار الكهربي.
- إذا كان من اللازم دفع الطعام إلى أسفل استخدمي أداة مناسبة مثل الملعقة البلاستيكية.
  قومى دائمًا بإيقاف تشغيل الجهاز وفصله من مصدر التيار الكهربائى إذا ترك دون
  - مراقبة، وقبل التجميع أو التفكيك أو التنظيف. • تنذيبة البالات الذلك الداري والمالية أذلته المباد التنامي تستت
  - تحذير: قبل إزالة الغطّاء العلوي من السلطانية، أغلقي الجهاز وانتظري حتى تتوقف الشفرات.
    - لا تستخدمي أصابعك لدفع الطعام خلال أنبوب التغذية. استخدمي استخدمي دائماً عصا دفع المكونات المزودة.
- يحظر استخدام القوة المفرطة لدفع الطعام إلى أسفل أنبوب التغذية فقد يؤدي ذلك إلى تلف الجهاز.
  - لا تستخدمي قفل الغطاء العلوي لتشغيل جهاز تحضير الطعام، استخدمي دائمًا زر التحكم في السرعة on/off (تشغيل/إيقاف).

#### Kenwood Ltd

New Lane Havant Hampshire PO9 2NH

kenwoodworld.com



© Copyright 2023 Kenwood Limited. All rights reserved

5722076991/1