

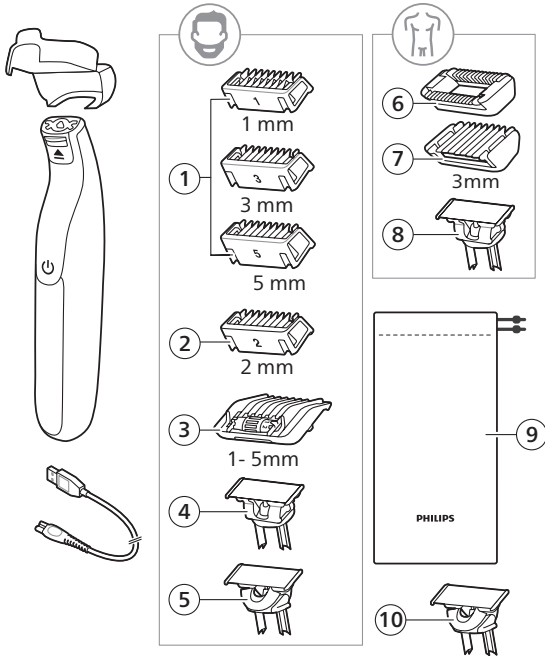


PHILIPS

QP2724
QP2734
QP2824
QP2834

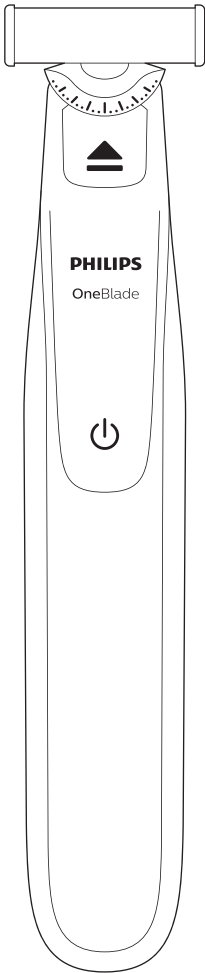

	1	2	3	4	5	6	7	8	9	10
QP2724/17	✓	✓			✓					
QP2724/20			✓	✓						
QP2734/20			✓		✓					
QP2824/20			✓	✓		✓	✓	✓		
QP2834/20			✓		✓	✓	✓	✓		
QP2724/23	✓				✓					
QP2734/23			✓		✓					
QP2834/23			✓		✓	✓	✓			✓
QP2724/30			✓	✓					✓	
QP2734/30			✓		✓					
QP2824/30			✓	✓		✓	✓	✓		
QP2724/31	✓				✓				✓	✓
QP2734/31			✓		✓				✓	
QP2824/31	✓				✓	✓	✓			✓
QP2724/50			✓	✓						

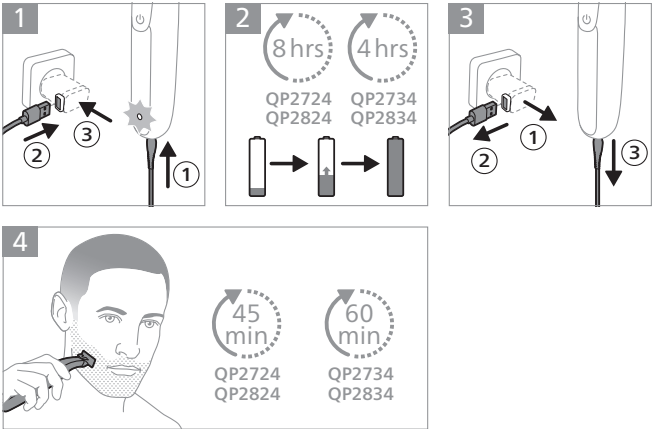

www.philips.com/support
















FR
Cet appareil, ses accessoires, cordons et batteries se recyclent
À DÉPOSER EN MAGASIN
OU
À DÉPOSER EN DÉCHÈTERIE

Points de collecte sur www.quefairedemesdechets.fr

© 2024 Koninklijke Philips N.V.
All rights reserved
3000.092.1301.9 (26/09/2024)

>75 % recycled paper
>75 % papier recyclé

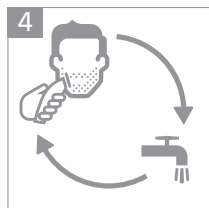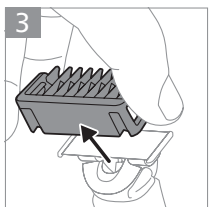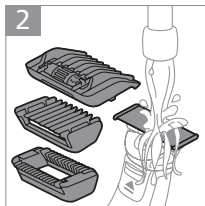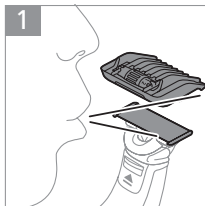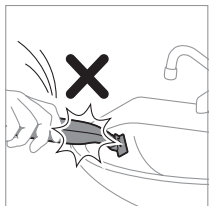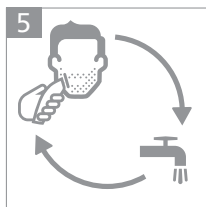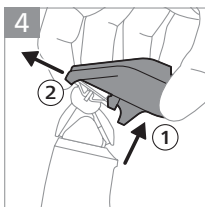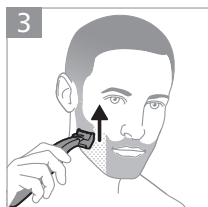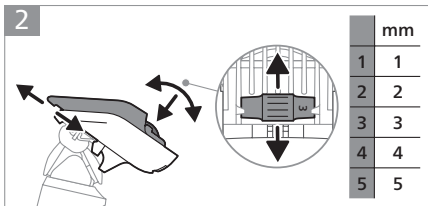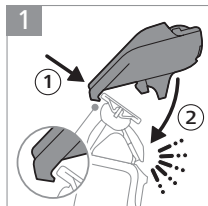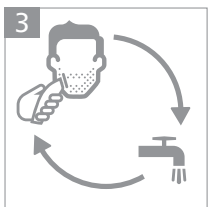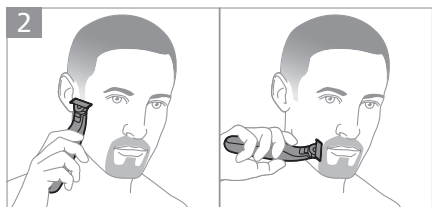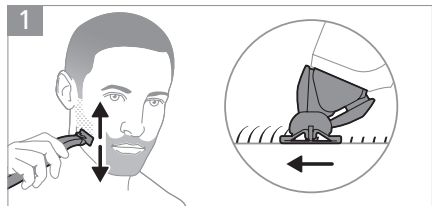

QP2824
QP2834

